

UCM-95

ADSL2+ Ethernet Gateway

Data Sheet

40363 v1.00 / Feb. 2018





HARDWARE SPECIFICATIONS

Hardware and I/Os:

- ADSL Port: RJ11, ADSL/ADSL2/ADSL2+
- LAN (Ethernet) Port: RJ45, 10/100 Mbit/s full/half duplex auto sense
- Power Supply: Pins 1-3 of 5-pin pluggable terminal block, 24VDC
- RST Input: Pins 4-5 of 5-pin pluggable terminal block, to reset or remote on/off
- On/Off button: To switch modem on/off
- Reset button: Reset to default configuration
- LED Indicators: POWER, ON, ETHERNET, DSL, INTERNET

Power Supply

- Nominal input voltage: 24VDC
- Absolute maximum input range: 20-35VDC
- Input frequency: DC
- Power consumption: 1.3W (Typ.)
- Isolation: 1000 VDC

Environmental

- Operating temperature: 0°C to 50°C
- Storage temperature: -20°C to 60°C
- Humidity: 20% to 90% RH (Non-condensing)

General

- Protection: IP20
- Mounting: DIN rail
- Housing: Black corrosion protected aluminium housing
- Dimensions (WxHxD): 44mmx95mmx93mm
- Weight: 0.5kg (Approx.)

LED Indicators:

- POWER (front side): Indicating input power
- ON (left side): Indicating modem On/Off and Ready/Fault status
- ETHERNET (left side):: Indicate LAN connection status
- DSL (left side):: Indicating DSL line status
- INTERNET (left side):: Indicating Internet status

SYSTEM SPECIFICATIONS

ADSL Compliance

- Support multi-mode standard (ANSI T1.413, Issue 2; G.dmt (G.992.1); G-lite (G992.2))
- EOC specified in ITU-T G.992.1
- ADSL2 G.dmt.bis (G.992.3)
- ADSL2 G-lite.bis (G.992.4)
- ADSL2+ (G.992.5)
- Reach Extended ADSL (RE ADSL)



ATM Protocol

- ADSL physical connection ATM AAL5 (ATM Adaptation Layer Type 5)
- Support multi-protocol over AAL5 (RFC1483/2684)
- Support VC-based and LLC-based multiplexing
- Support up to 8 PVCs
- Support PPP over ATM AAL5 (RFC2364)
- PPP over Ethernet support for DSL connection (RFC 2516)
- I.610 F4/F5 OAM loop-back

Network Protocols

- IP routing
- 802.1d transparent bridging
- IGMP v1&v2
- RIP-1/RIP-2
- ICMP
- TCP/UDP
- DHCP client/server/relay
- DNS proxy
- Dynamic DNS
- UPnP support
- NAT

Management

- FTP for firmware and configuration
- Configuration backup/restore
- Remote management control: Telnet, FTP, and WebUI
- SNMP support
- TR-069 compliance


DEFAULT LOGIN DETAILS

- IP address: <http://192.168.1.1>
- User name: admin
- Password: 1234




INTERFACE OVERVIEW

Front view:

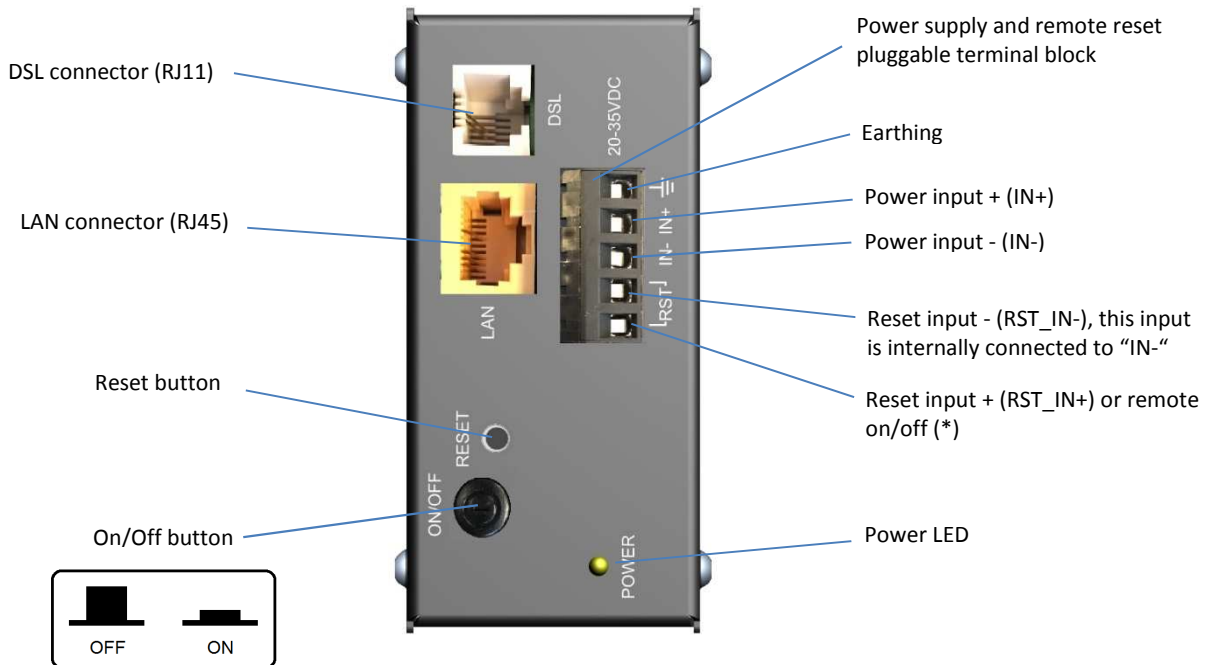

(*): To reset or remotely switch modem on or off, "RST_IN+" should be connected to "RST_IN-".

Left view:

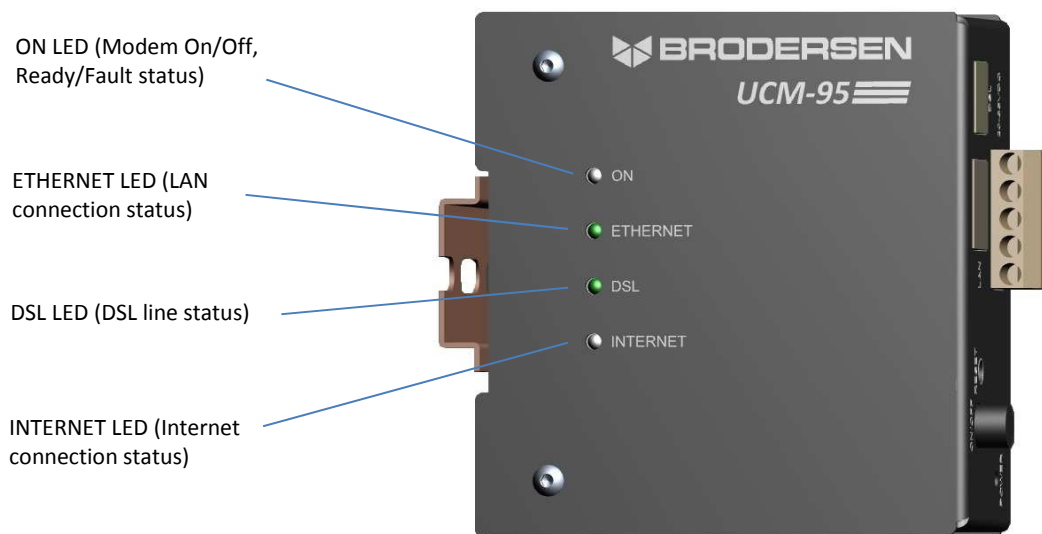



LED Descriptions

LED	Status & Color	Description
Power	On - Yellow	The modem is receiving power from its main power connector.
	Off	The modem is not receiving power or forced off by connecting RST inputs together.
ON	On - Green	The modem is on and receiving power correctly and ready for use.
	Blinking - Green	The modem is self-testing.
	On - Red	The modem has failed from power self-testing or there is malfunction.
	Off	The On/Off button is in Off state or the modem is not receiving power.
ETHERNET	On - Green	The modem has an Ethernet connection with a device on the LAN.
	Blinking - Green	The modem is sending/receiving data to/from the LAN.
	Off	The modem does not have an Ethernet connection with the LAN.
DSL	On - Green	The DSL line is up.
	Blinking - Green	The modem is initializing the DSL line.
	Off	The DSL line is down.
INTERNET	On - Green	The modem has an IP connection but no traffic.
	Blinking - Green	The modem is sending or receiving IP traffic.
	On - Red	The modem attempted to make an IP connection but failed.
	Off	The modem does not have an IP connection.

RST Inputs

The two last pins of the 5-pin pluggable terminal block on the front side of the modem (RST_IN- and RST_IN+) are used for remote reset or remotely switching modem on and off. Reset input - (RST_IN-) is internally connected to Power_IN- (or GND). For normal operation, the Reset input + (RST_IN+) shall not be connected. If the RST input pins (RST_IN+ and RST_IN-) are connected at the same time, the modem will turn off and the POWER LED on the front side will go to off-state. A free contact output can be connected between the RST input pins (RST_IN+ and RST_IN-) to enable remote command for modem power on/off or reset.

RESET Button

Sets the modem to factory default configuration and resets password to default ("1234").

In order to use the Reset button:

- Make sure the ON LED is on (not flashing)
- Press RESET button for 10 seconds or until the ON LED begins flashing. Release the button and the modem restarts.

On/Off Button

Switches the modem on and off. For normal operation, the on/off button is always in ON mode.

WAYS TO MANAGE THE UCM-95 MODEM

Access, Monitoring, and Management:

- Web Configurator: Recommended for normal management of the modem using a web browser
- Command Line Interface: Used mainly for troubleshooting
- FTP: For firmware upgrades and configuration backup/restore
- SNMP: The device can be monitored by an SNMP manager
- TR-069: Auto-configuration server for remote configuration

Security and Operation:

- Apply password management
- Back up and save the modem configuration



INSTALLATION

To install the modem, do the following steps:

- Connect the DSL cable to the DSL RJ11 jack
- Connect the Ethernet cable to the LAN RJ45 jack
- Connect a free contact output to the RST inputs of the pluggable terminal block for remote power on/off and reset (Optional)
- Connect power to the power inputs of the pluggable terminal block
- Set On/Off button to ON mode

WEB CONFIGURATION AND TECHNICAL REFERENCE

For more detailed information (e.g. web configuration, technical reference, etc.) follow the URL:

ftp://ftp.zyxel.com/AMG1001-T10A/user_guide/AMG1001-T10A_1.pdf

NOTE:

This data sheet is subject to change without notice.